
PARTS AND THEIR FUNCTIONS

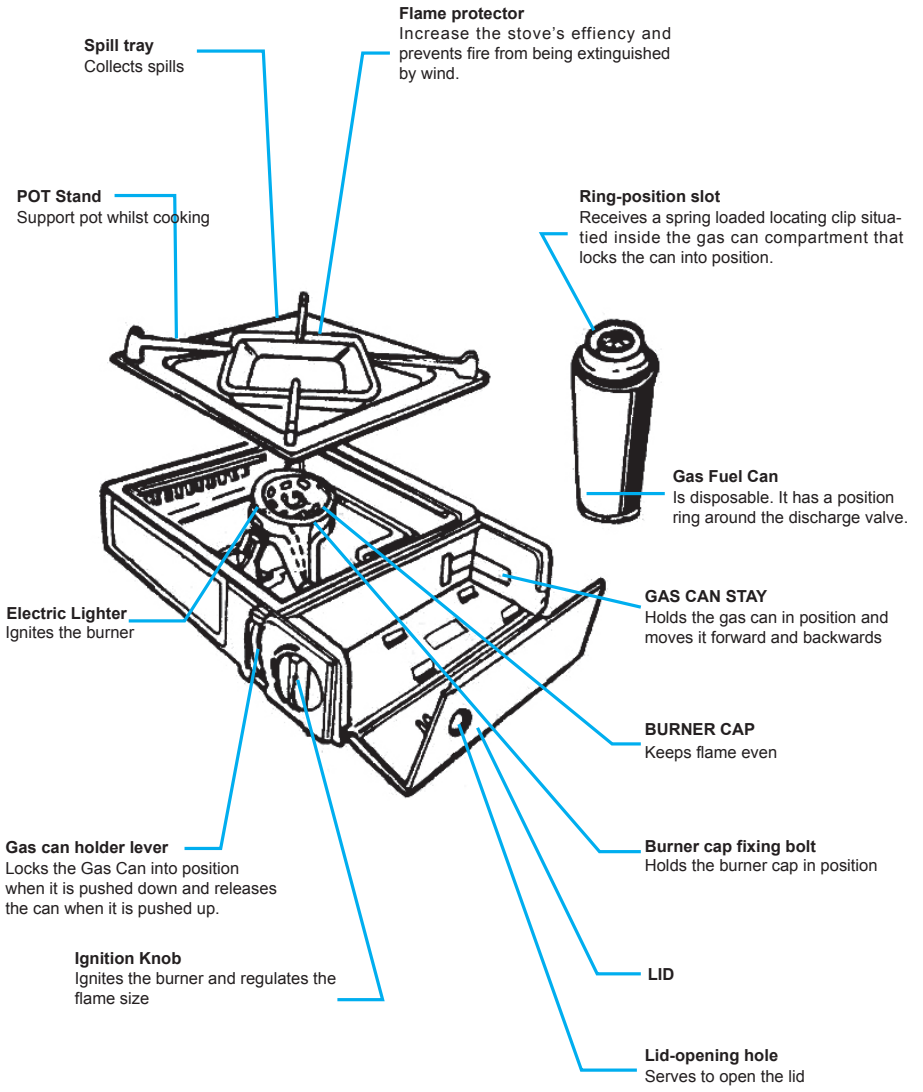

Spill tray
Collects spills

Flame protector
Increase the stove's effiency and prevents fire from being extinguished by wind.

POT Stand
Support pot whilst cooking

Ring-position slot
Receives a spring loaded locating clip situa-tied inside the gas can compartment that locks the can into position.

Gas Fuel Can
Is disposable. It has a position ring around the discharge valve.

Electric Lighter
Ignites the burner

GAS CAN STAY
Holds the gas can in position and moves it forward and backwards

BURNER CAP
Keeps flame even

Gas can holder lever
Locks the Gas Can into position when it is pushed down and releases the can when it is pushed up.

Burner cap fixing bolt
Holds the burner cap in position


Ignition Knob
Ignites the burner and regulates the flame size

LID

Lid-opening hole
Serves to open the lid


OPERATING INSTRUCTIONS

1 Turn over the cover surrounding the burner and open the gas lid.

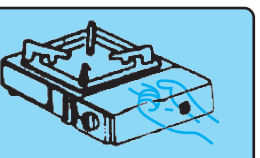


- The flat part of the cover must face down, The spill tray and the pot stand must face up.
- To open the lid, insert your finger ino the lid-opening hole and pull up.

2 Insert the gas can

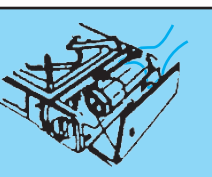


- Eusure ignition knob is turned fully off and gas can lever is pushed up.
- Position the can's bottom against the gas can stay.
- The gas can's ring positioning slot must face upwards.

3 Push the gas can holder lever right down.

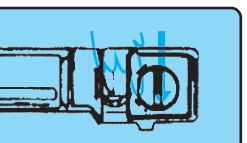


- Check that the sprig loaded locating spring is inside the ring positioning Slot.
- Note: you will bot be able to press down the can holder lever if the pot stand is not facing upwards(step 1)

4 Close the gas can cover

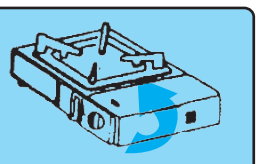


- Ensure the stove is on a suitable non flammable solid surface away from flammable materials before igniting the gas.

5 Ignite the stove

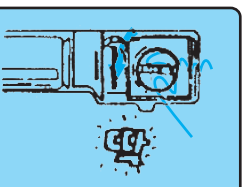

- Turn the ignition knob anticlockwise to the "ON" position until you hear a click.

6 Place a Cooking pot on the pot stand and regulated the flame

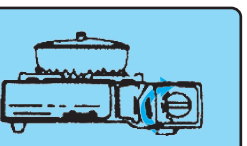

- You can reduce the flame size by turning the ignition knob clockwise (to the right) Increase the flame size by turning it anticlockwise (to the left)

7 extinguish the flame after cooking



- Turn the ignition knob clockwise to the "OFF" position.
- Allow to cool before moving.

8 Release the gas fuel can



- Lift the Gas can Holder lever up . Ensure that the lever is in the RELEASE position whilst the stove is not in use.

Use only in a well ventilated area
Do not leave unattended
without proper ventilation or maintenance gas appliances can produce dangerous levels of carbon monoxide
Know the symptoms of carbon monoxide poisoning:headache,dizziness,weakness, nausea,vomiting,sleepiness and confusion,
Carbon monoxide reduces the blood's ability to carry oxygen.
Low blood oxygen levels can result in loss of consciousness and possible death.

Carbon monoxide poisoning,which can easily be mistaken for a cold or flu, is often detected too late.

Alcohol consumption and drug use increase the effects of carbon monoxide poisoning.

SAFETY INSTRUCTIONS

Handle USED GAS CAN with care.

Do not throw used Gas can into fire, nor place it next to fire it can explode.
Punch a hole in the used Gas can with a nail or other sharp object before discarding it




Use the stove only for cooking

The stove has been designed for cooking. Any other use such as drying of clothes or igniting of coal may cause a fire.



Do not cause over heating

A large pot placed over a range of sloves may cause over heating

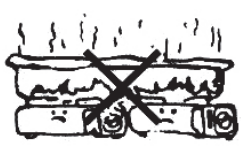

Prevent boiling liquids from overheating

If a pot accidentally overflows into the burner, switch the stove off and wipe it with a dry cloth.
if required, wash the burner with laundry soap first.




Stay Calm in case of an accident

Turn the igniton knob clockwise to the "OFF" posi-tion and lift the gas can holder lever upwards.



Inspect the stove for gas leaks.

Ensure that the gas can valve is seated correctly and the spring loaded locating clip Fits firmly in the ring-positioning slot of the can.

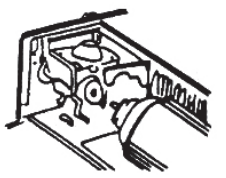


Select place sheltered from wind.

Wind reduces efficiency of the stove and may extin-guish flames.




Choose a fire safe place

Avoid places susceptible for fire such as places near imflammable materials and goods or under shelves.
Keep the stove at least 15 cm away form walls in any direction.

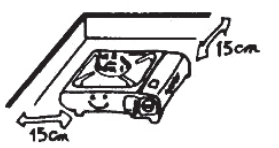


Standard

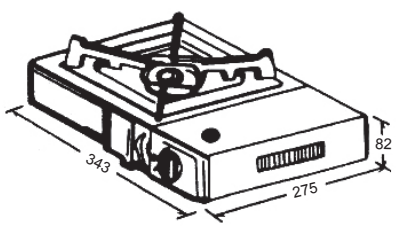

Outdoor use

Select a place in the shade , away from direct sunrays.
Place the stove on a solid fire resistance base isolating the stove from sandy soils.

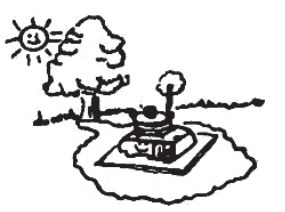

Note: Position the spill tray and the Ignition lever correctly

The spill tray/Pot sand has to face up and the igni-tion lever has to be in its "OFF" position before the gas can may be locked into the working position.
If any of these two conditions are not met, the gas can holder lever will not move down.



Type .....Portable gas stove
Size.....343X275X82mm
Weight (excl. the can & case).....1.86 kg
Fuel.....Butane